

Quick Reference Guide

For use with: Nurit 2059, 2060, 2070, 2080, 2085, 2090, 3010, 3020



CASH CREDIT / ACTIVATE

Swipe card or enter card number
Press **1** for cash
Press **2** for activate / credit
Enter amount and press **Enter**
Enter manager passcode **8448**

CASH SALE

Swipe card or enter card number
Press **1** for cash
Press **1** for sale
Enter amount and press **Enter**

POINT ACCRUE

Swipe card or enter card number
Press **2** for points
Press **2** for accrue
Enter amount and press **Enter**
Enter manager passcode **8448**

POINT REDEEM

Swipe card or enter card number
Press **2** for points
Press **1** for redeem
Enter amount and press **Enter**

VOID

Swipe card or enter card number
Press **3** for void
Enter the transaction number on receipt
Enter the verification number on receipt

REPRINT

Swipe card or enter card number
Press **6** for reprints

BALANCE INQUIRY

Swipe Card or enter card number
Press **4** for balance

RENEW CARD

Swipe card or enter card number
Press **5** for renewal
Card will renew as if activated today

REPORT (DATE)

Swipe card or enter card number
Press **7** for reports
Press **2** for card
Enter manager passcode **8448**
Enter date (**MMDDYY**)
January 14, 2010 would be entered as 011410

REPORT (EMPLOYEE)

Swipe card or enter card number
Press **7** for reports
Press **3** for employee
Enter manager passcode **8448**
Enter employee number
Enter date (**MMDDYY**)
January 14, 2010 would be entered as 011410

REPORT (CARD HISTORY)

Swipe card or enter card number
Press **7** for reports
Press **2** for card
Enter manager passcode **8448**

EZCheck Merchant Number: _____

EZCheck Customer Service 800.797.5302

EZCheck Technical Support: techsupport@ezchk.com